
MEASURING GUIDE

HOW TO MEASURE YOUR VERANDA

A step-by-step guide to measuring your veranda for a custom-made sunshade.

Accurate measurements are essential to ensure a perfect fit and smooth installation.

The process is simple. Just follow these four steps carefully.

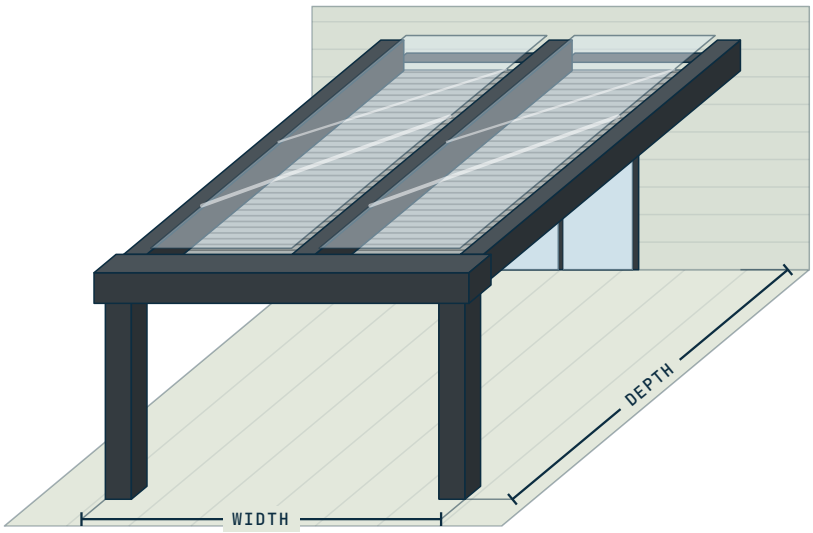


THREE MEASUREMENTS PER SECTION


- **A** Top width
- **B** Bottom width
- **C** Depth

BEFORE YOU START

Make sure you have a measuring tape or laser measuring tool.

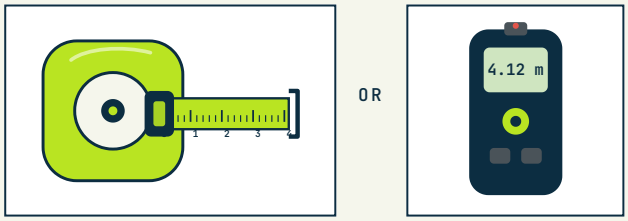


THE 4 STEPS

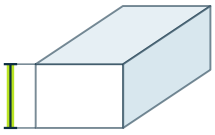

STEP 01

SPACE


Check the available installation space.

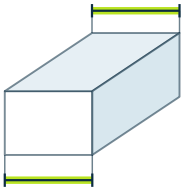

STEP 02

WIDTH

Measure the top width and the bottom width.

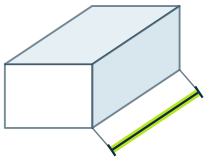

STEP 03

DEPTH

Measure from the front to the back.

STEP 04

CHECK

Repeat for every section and double-check.

STEP 01

01 CHECK THE INSTALLATION SPACE

First, check the available installation space.

A minimum clearance of **4 centimetres** is required to install the sunshade system correctly. Make sure this space is available before proceeding.

MINIMUM CLEARANCE

4 cm

- ☐ Installation space checked
- ☐ At least 4 cm clearance
- ☐ Space is available


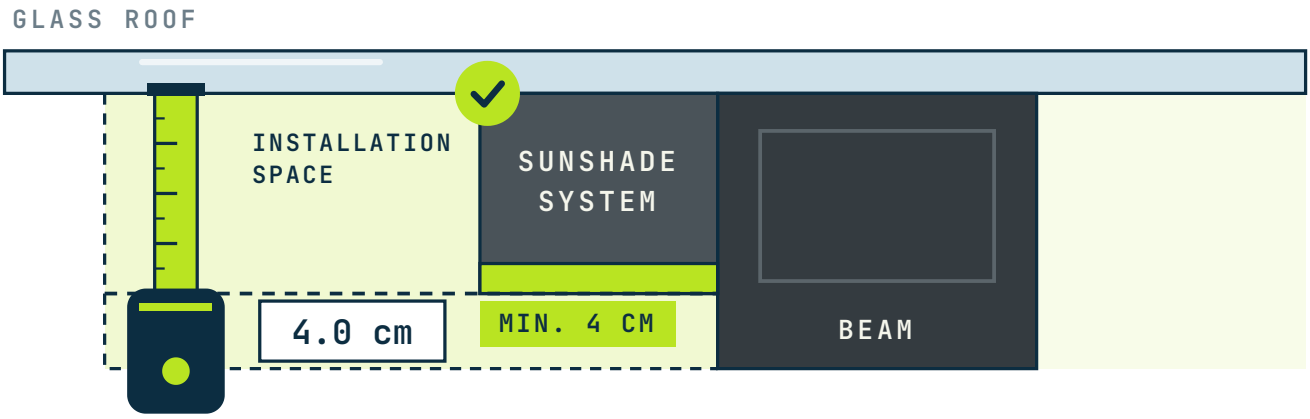


ILLUSTRATION · CROSS-SECTION · NOT TO SCALE

STEP 02

02 MEASURE THE WIDTH

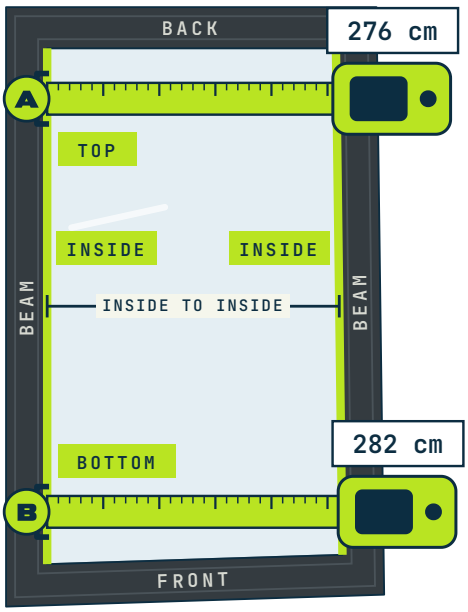

Next, measure the width between the veranda beams.

You need to take **two measurements**:

A TOP WIDTH
Measure the width at the top of the section.


B BOTTOM WIDTH
Measure the width at the bottom of the section.

Inside to inside. Make sure you measure from the inside of one beam to the inside of the opposite beam.

Keep both measurements. They will be entered separately in our online configurator.

STEP 03

03 MEASURE THE DEPTH

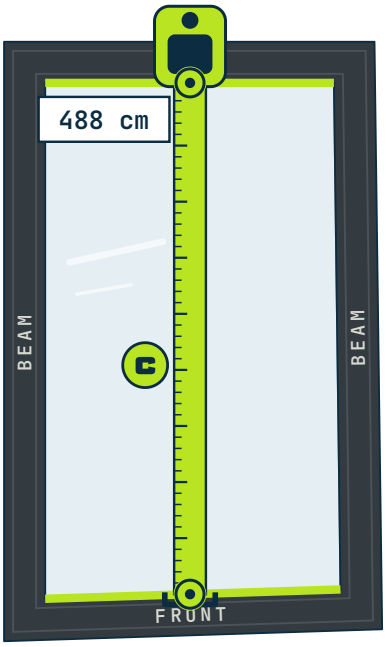

Now measure the depth of the section, from the front to the back of the veranda.

Take the measurement carefully, following the **measuring points** shown in the drawing.

MEASURING POINTS

- **Front** · inside of the front beam
- **Back** · inside of the back beam

EXAMPLE · SECTION 1

A TOP WIDTH	B BOTTOM WIDTH	C DEPTH
276 CM	282 CM	488 CM

STEP 04

04 CHECK ALL MEASUREMENTS

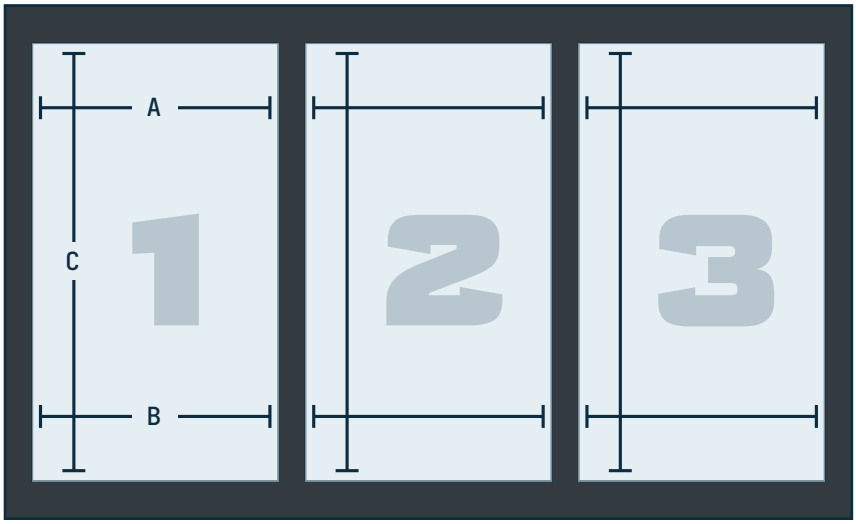


ILLUSTRATION · VIEW FROM ABOVE · NOT TO SCALE

Repeat the measuring process for every section of your veranda.

Remember to measure **each section individually** and record its **top width, bottom width and depth**.


Double-check all measurements before submitting your order.

- ☐ Every section measured
- ☐ A, B and C recorded for each
- ☐ All double-checked

YOUR MEASUREMENTS

Write down the measurements of every section here — then enter them in the configurator, each section separately.

AT A GLANCE

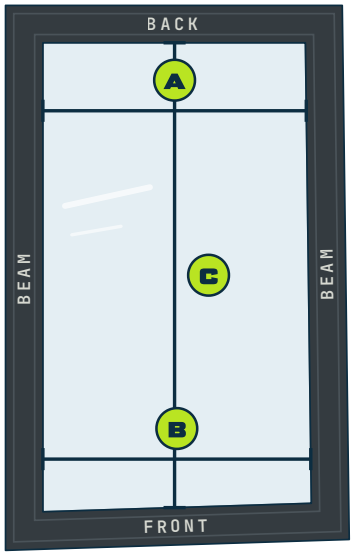

- **A** Top width
- **B** Bottom width
- **C** Depth

SECTION	A TOP WIDTH (CM)	B BOTTOM WIDTH (CM)	C DEPTH (CM)	CHECKED TWICE
EXAMPLE	276	282	488	■ ■
1				☐ ☐
2				☐ ☐
3				☐ ☐
4				☐ ☐
5				☐ ☐
6				☐ ☐
7				☐ ☐
8				☐ ☐

ENTER THEM ONLINE

When configuring your product on the Luwenzo website, make sure to enter the measurements for each section separately.

SECTION 1 — A CM | B CM | C CM

SECTION 2 — A CM | B CM | C CM

… AND SO ON FOR EVERY SECTION

NEED HELP?

If you have any questions or are unsure about your measurements, our team will be happy to help.

Luwenzo

Thank you for choosing Luwenzo. Enjoy the comfort and shade of your new veranda sunshade!